


Logic Control Inputs	
I1	Float
I2	Door Switch
I3	Stop Button
I4	Start Button
I5	Light Wash
I6	Medium Wash
I7	Heavy Wash
I8	Fill Button

Logic Control Outputs	
Q1	Fill Solenoid
Q2	Wash Light
Q3	Pump
Q4	Rinse Solenoid
Q5	Fan
Q8	LWCO

ITEM	DESCRIPTION	PART # (208V/230V)	PART # (460V)
A	PUMP BREAKER	511-5021	511-5346
B	PUMP BREAKER	511-5348	511-5344
C	RINSE HEAT BREAKER	511-5345	511-5342
D	RINSE HEAT BREAKER	511-5345	511-5342
E	RINSE HEAT BREAKER	511-5345	511-5342
F	WASH HEAT BREAKER	511-5339	
G	WASH HEAT BREAKER	511-5339	
H	PUMP CONTACTOR	511-5298	511-5296
I	PUMP OVERLOAD	511-5309	511-5306
J	PUMP CONTACTOR	511-5297	511-5294
K	PUMP OVERLOAD	511-5308	511-5305
L	RINSE HEAT CONTACTOR	511-5294	
M	RINSE HEAT CONTACTOR	511-5294	
N	RINSE HEAT CONTACTOR	511-5294	
O	RINSE HEAT CONTACTOR	511-5294	
P	WASH HEAT CONTACTOR		
Q	FAN BREAKER	511-5340	
R	FAN CONTACTOR	511-5290	
S	FAN OVERLOAD	511-5300	
T	TRANSFORMER	511-5250	
U	PRIMARY FUSE	511-5207	511-5115
V	24V SECONDARY FUSE	511-5120	
W	LOGIC CONTROL	511-5314	
X1	BURNER CONTROL SUBBASE	509-5143	
X2	BURNER CONTROL	509-5142	
X3	AIR PURGE CARD	509-5144	
X4	FLAME CARD	509-5145	

Lower Terminal Blocks			
Soap	To 24VAC Soap Dispenser	W	From Wash High Limit
T3 & T4	To Rinse Solenoid	R	From Rinse High Limit
4	From Float	C & H	To Temp Controls
1	To Float	T1	To Door Switch
		T2	From Door Switch
		Fill	To Fill Solenoid

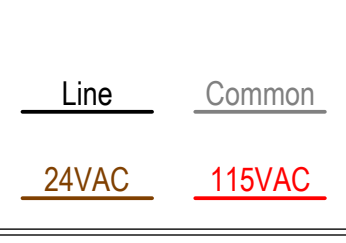

Burner Control Connections	
G	Ground
2	To Gas Valves, Blower Motor, Ignition Transformer (Common)
4	To Blower Motor
7	From Airflow Switch
8	To Pilot Valve
9	To Main Gas Valve
10	To Ignition Transformer
F	From Flame Sensor

Fuse Table	
208V/230V Primary	10 Amp
460V Primary	5 Amp
24V Secondary	7 Amp

Name: RW40120 Schematic - Gas Heat

LVO Manufacturing, Inc
808 N 2nd Ave E
Rock Rapids, IA 561246
Phone: (712) 472-3734



Rev. -

C. Manswood

1/29/2015

Pan Washers