


ITEM	DESCRIPTION	MODEL(S)	PART # (208V/230V)	PART # (460V)
A	PUMP BREAKER	FL10, PT10, CL10	511-5344	511-5342
		FL14, PT14	511-5346	511-5343
		FL25, PT25		
B	WASH HEATER BREAKER		511-5347	511-5343
C	RINSE HEATER BREAKER			
D	FAN BREAKER		511-5340	
E	PUMP CONTACTOR	FL10, PT10, CL10	511-5294	511-5292
		FL14, PT14	511-5295	511-5293
		FL25, PT25		
F	WASH HEAT CONTACTOR		511-5294	
G	RINSE HEAT CONTACTOR			
H	PUMP OVERLOAD	FL10, PT10, CL10	511-5305	511-5303
		FL14, PT14	511-5307	511-5304
		FL25, PT25		
I	FAN RELAY		511-5179	
J	PRIMARY FUSE		511-5130	511-5045
K	FAN DRIVE		511-5355	511-5356
L	TRANSFORMER		511-5056	
M	24V SECONDARY FUSE		511-5207	
N	LOGIC CONTROL		511-5314	

Logic Control Inputs	
I1	Float
I2	Door Switch
I3	Stop Button
I4	Start Button
I5	Light Wash
I6	Medium Wash
I7	Heavy Wash
I8	Fill Button
Logic Control Outputs	
Q2	Wash Light
Q3	Pump
Q4	Rinse/Fill Solenoid
Q5	Fan
Q8	LWCO

Lower Terminal Blocks			
Soap	To 24VAC Soap Dispenser	1	To Float
T3 & T4	To Rinse Solenoid	W	From Wash High Limit
4	From Float	R	From Rinse High Limit
		C & H	To Temp Controls
		T1	To Door Switch
		T2	From Door Switch

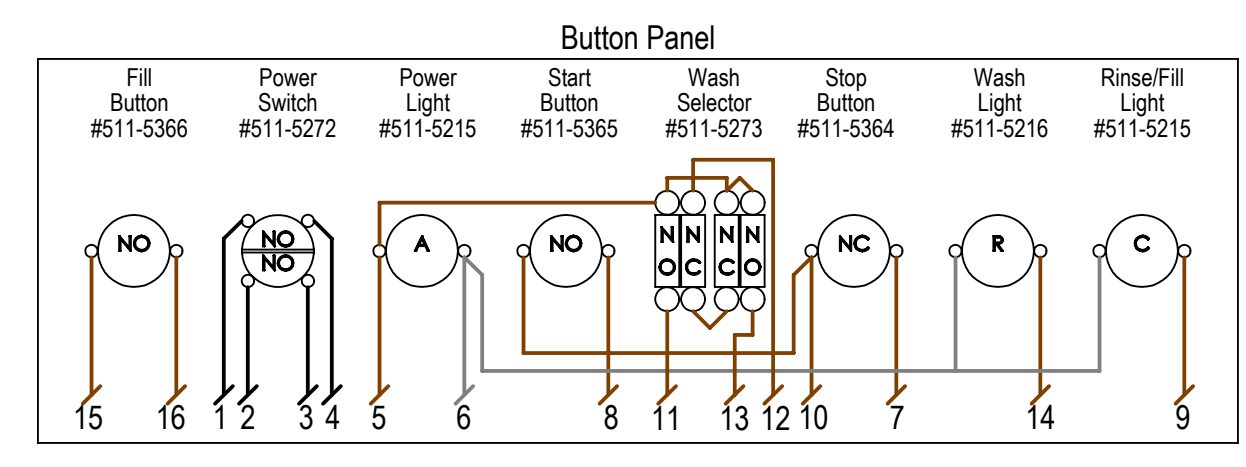

Line	24VAC	24VDC	Fuse Table	
			208V/230V Primary	3 Amp
			460V Primary	2 Amp
			115V Secondary	1.25 Amp
			24V Secondary	10 Amp